MBS-Standoffs.con	n
-------------------	---


Drill Template


Mark your drill locations according to drawing measurements.




# LED Clamps

## Specifications and Instruction Guide

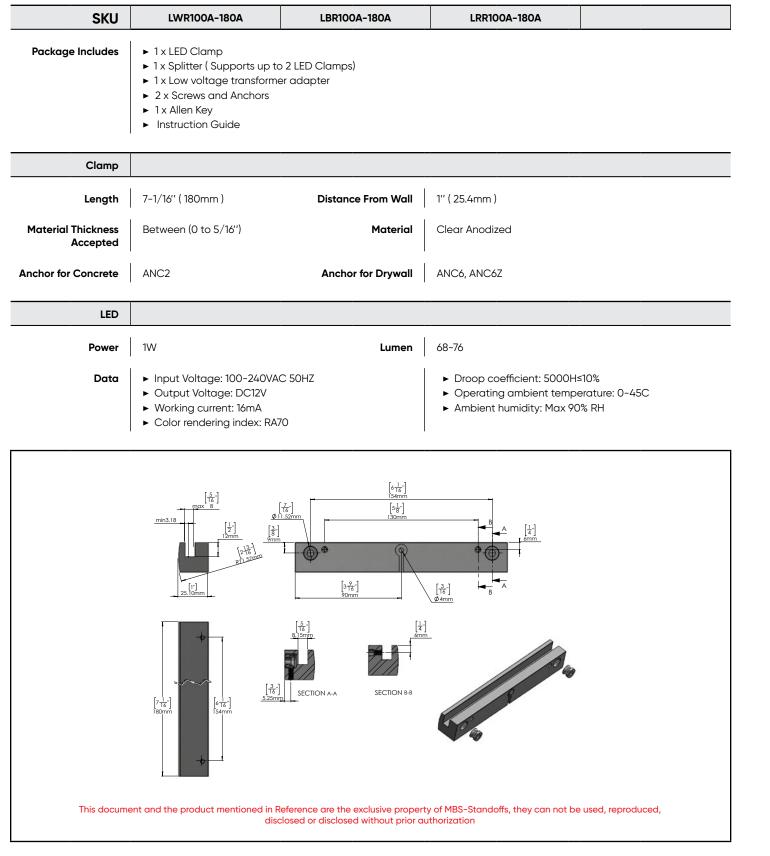

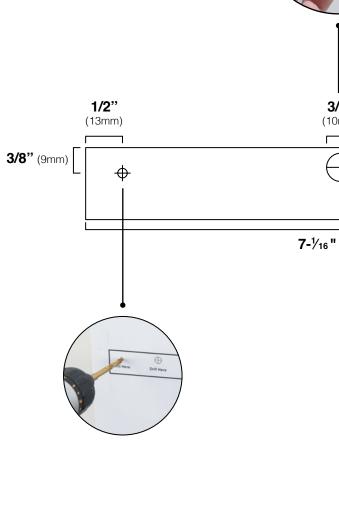

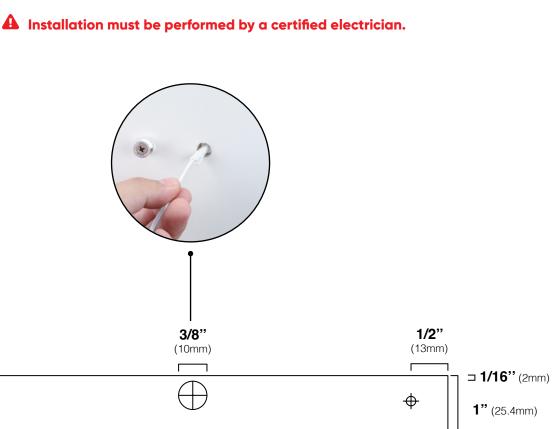

**7-1/16**" (180mm)


### **Installation Steps**

**A** Installation must be performed by a certified electrician.

### **Installation Steps**

**A** Installation must be performed by a certified electrician.

	as installation must be performed by a certified electrician.				Installation must be performed		
Directions				Directions			
1	Place template on wall with tape. Make sure that template is level.	bill Here	tin the second	5	Thread the cable through the wall opening. (Sign must be mounted on LED Clamp before this step)		
2	Drill holes into the wall where marks were located.	orill Here	Drill Here	6	Position two barrels into the sockets.		
3	Insert supplied anchors into the wall.		(4)	7	Utilize an allen wrench to tighten the clamps securely onto the wall.		
4	Mount the barrels to the wall.				This document and the product mentio they can not be used, reproduced, disc		

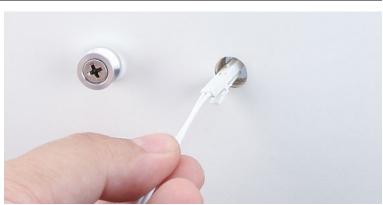





tioned in reference are the exclusive property of MBS-Standoffs, disclosed or disclosed without prior authorization!

+1 (813) 938-6025