


Installation Guidelines

Edge Grip Standoffs




Installation Tips

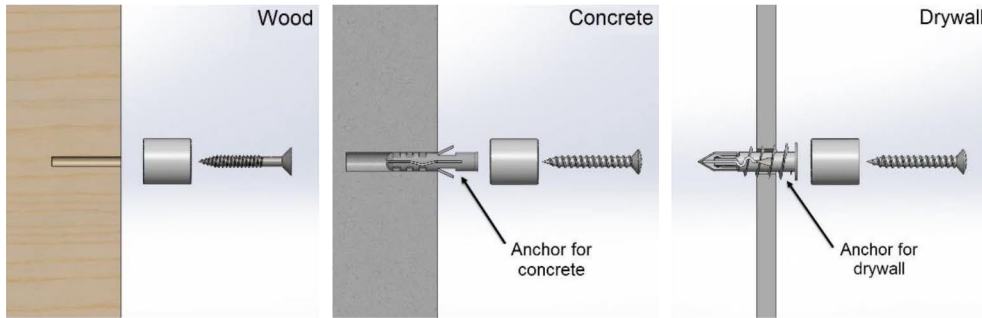



Always check the installation surface to ensure that the substrate will be strong enough to hold the weight of the panel. All installation must be done so with proper hardware and protective gears to ensure safety. It is important to check that parts are properly tightened at the end of each installation.

1 Mark the location on the mounting surface where the panel will be installed. Drill any necessary holes.


2 Install the appropriate wall anchors into the mounting surface.

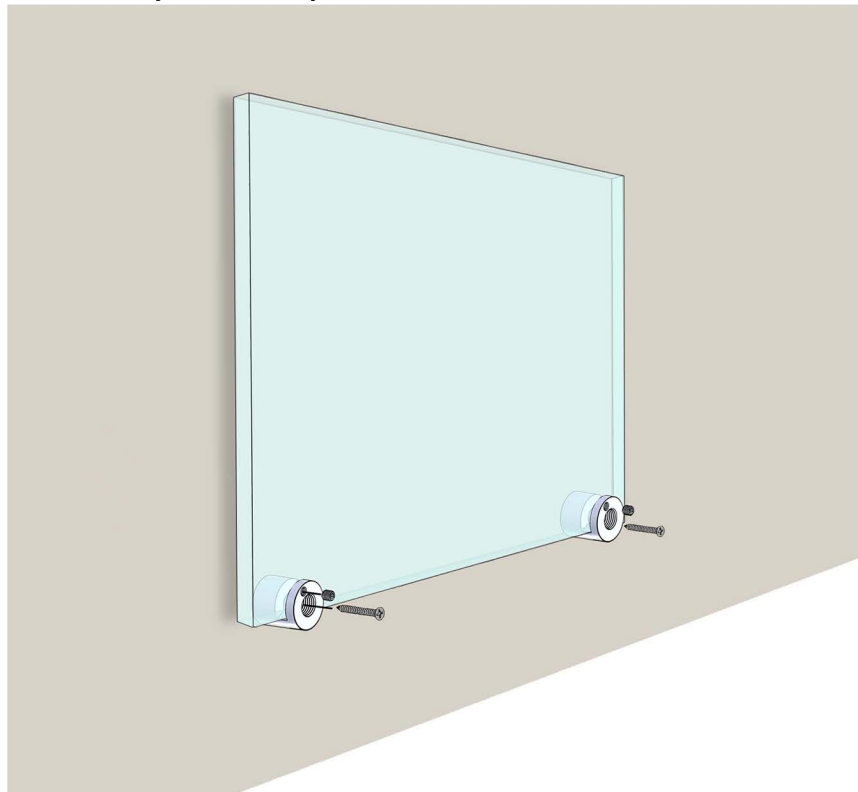

3 Take the two bottom edge grip standoffs and insert the screw into the center of the barrel and secure each one to the inserted wall anchor. Next, take your panel and position it into the bottom edge grips. Insert screws into your remaining barrels, position it on the top of your panel to the inserted wall anchor and secure them to the anchor.

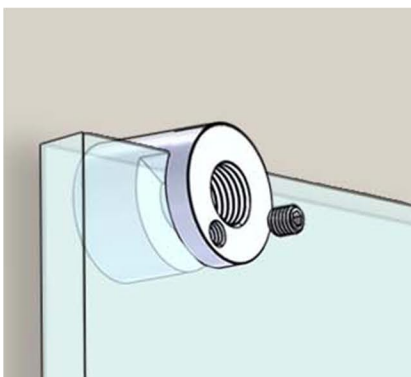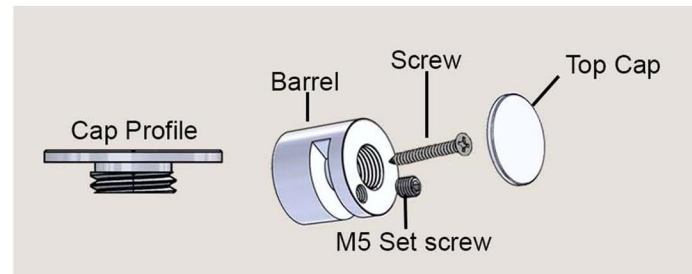

4 Now that your panel is in place you can position your panel left to right and tighten each M5 set screw to secure the panel to the barrels. With the set screws tightened, take the caps and proceed to screw each cap into the barrels to finish your project.

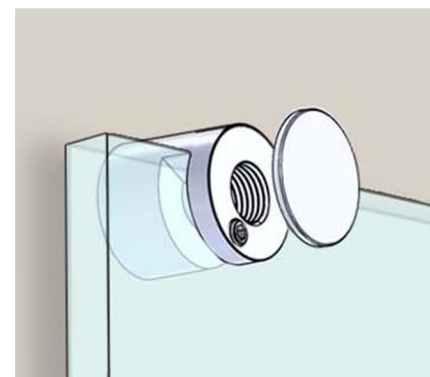

Mbs Standoffs
5046 W. Linebaugh Ave.
Tampa, FL 33624



Phone: (813) 938-6025
Fax: 1-813-425-9007
Mail: sales@mbs-standoffs