
Installation Guidelines

Suspended System Cable Kit

Installation Tip

It is essential to check that the top ceiling fixings are strong enough to take the weight of the items being displayed, while allowing for the tension in the cables. All installation must be done so with proper hardware and protective gears to ensure safety. It is important to check that parts are properly tightened at the end of each installation.




1 Find the location where the TCLAMP will be attached to the drop ceiling. Put one half on each side of the drop ceiling rail and slide the two halves together.



2 Take the looped end of your cable and put it over the TCLAMP hook. Take your cable and cut the cable to the desired length. Allow extra to be screwed into the hanging forks.



3 Take your cut cable and feed it through the hole on the end of the fork and tighten the set screw to hold the cable in place.

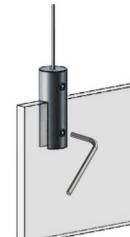

4 With the fork(s) attached to the cable you can attach your panel to the forks. Unscrew the set screw, position your panel in place and secure the set screw. *Note: The stainless steel forks will have washers to protect your panel.*

Mbs Standoffs 5046 W. Linebaugh Ave. Tampa, FL. 33624



Phone: (813) 938-6025 Fax: 1-813-425-9007 Mail: sales@mbs-standoffs

