



MBS-Standoffs.com

Wooden Standoffs Installation Guide

For Mounting Acrylic Panels, Signs, and Displays



Kit Includes


- 4 x Wooden Standoff Caps & Barrels
- 4 x Combination Screws & Anchors
- 4 x Zinc Studs



- 1.** Carefully mark the spots on the wall and drill the holes in place.



- 2.** Install wall anchors and secure them using combination screws.

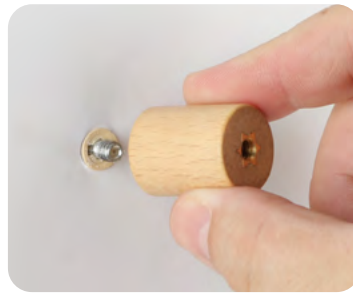

- 3.** Screw the wooden barrels onto the screws until secure.




- 4.** Screw the metal studs into the wooden barrels.



- 5.** Ensure the studs are long enough to hold both the acrylic panels and the cap.



- 6.** Carefully position the acrylic panel onto the studs, aligning the holes with the mounts.

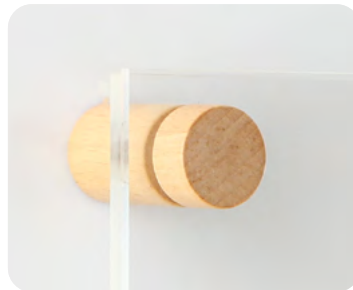

- 7.** Secure the acrylic panel in place by fastening the wooden cap over the stud.



- 8.** Step back, admire your work, and enjoy your beautifully mounted photo frame.

Having trouble with installation or have questions?

Please call one of our sales representatives at

+1 (813) 938-6025