


## Acrylic Wall Frame Kits Specifications and Instruction Guide

	WAC1114-C-AS16-12SL WAC1114-C-SBLS16-12		WAC1114-C-AS16-12BK WAC1114-C-SBLP16-12		WAC1114-C-AS16-12GD WAC1114-			C-AS16-12BR
SKU								
Package Includes	<ul> <li>2 x Acrylics</li> <li>4 x Standa</li> <li>4 x Screws</li> <li>1 x Drill Ten</li> <li>1 x Instruct</li> </ul>	offs and Anchors nplate						
Standoffs	AS16-12SL	AS16-12BK	AS16-12GD	AS16-12BR	SBLS16-12	SBLP16-12		
Diameters	5/8" ( 16mm )		Distance From Wall		1/2" ( 12.7mm	)		
Material Thickness Accepted	Between (1/8'' and 5/16'')		Thread		Metric M10			
Aluminum	<ul> <li>Silver Anodized</li> <li>Black Anodized</li> <li>Champagne Anodized</li> <li>Gold Anodized</li> </ul>		Stainless Steel		<ul><li>Satin Brushed</li><li>Polished</li></ul>			
Washers	No		Washers		x 8			
[0.18in] (0.	Minimum Thickness	[0.63in] Ø 16mm	A [0.20] A (0.18in] A	Maximum Thickness [0.31in]	B	[0.16in] 4mm 3.50mm		0.47in Information B-B

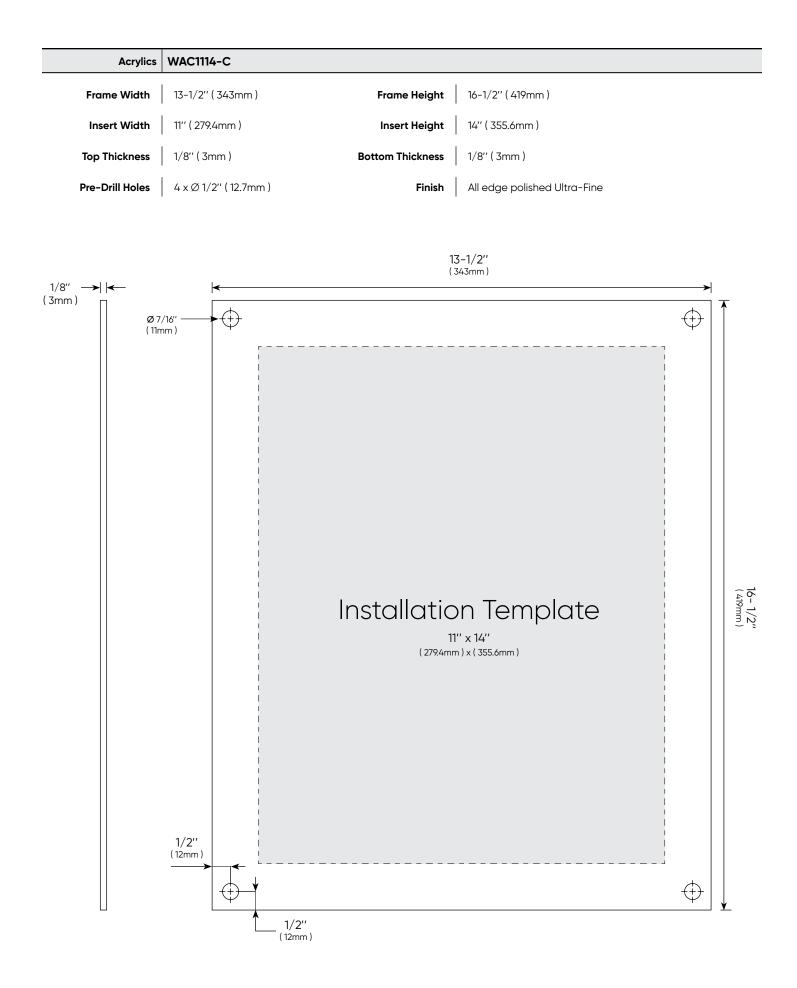

## **Installation Steps**

Directions		
1	Place template on wall with tape. Make sure that template is level. Mark the hole locations.	Constant of the second se
2	Drill a 1/4" hole in to the wall where marks were made.	Drill Hete
3	Insert supplied anchors into the wall.	
4	Mount the barrels to the wall.	

## **Installation Steps**

## Directions

5 Remove plastic film from the back of the panels. Center your image onto one of the panels and sandwich the second panel on top of the image making sure all of the edges and holes are aligned.



6 Place the sandwiched panels over the standoff barrels, insert the screw caps through the holes and into the barrels. Hand tighten the screw caps to secure both the panels and image in place.



This document and the product mentioned in reference are the exclusive property of MBS-Standoffs, they can not be used, reproduced, disclosed or disclosed without prior authorization!