

## **Acrylic Wall Frame Kits**


## Specifications and Instruction Guide

SKU	WAC1117-C-AS19-25SL	WAC1117-C-AS19-25BK	WAC1117-C-AS19-25GD	WAC1117-C-AS19-25BR
	WAC1117-C-SBLS19-25	WAC1117-C-SBLP19-25		


### Package Includes

- ► 2 x Acrylics
- ► 4 x Standoffs
- ► 4 x Screws and Anchors
- ► 1x Drill Template
- ▶ 1x Instruction Guide

Standoffs	AS19-25SL	AS19-25BK	AS19-25GD	AS19-25BR	SBLS19-25	SBLP19-25		
Diameters	3/4" ( 19mm	)	Distanc	e From Wall	3/4" ( 20mm )			
Material Thickness Accepted	Between (1/8	3" and 5/16")	Thread		Metric M10			
Aluminum	<ul><li>► Silver Anoc</li><li>► Black Anoc</li><li>► Champag</li><li>► Gold Anoc</li></ul>	dized ne Anodized	Stainless Steel		<ul><li>► Satin Brushe</li><li>► Polished</li></ul>	ed		
Washers	No			Washers	x 8			

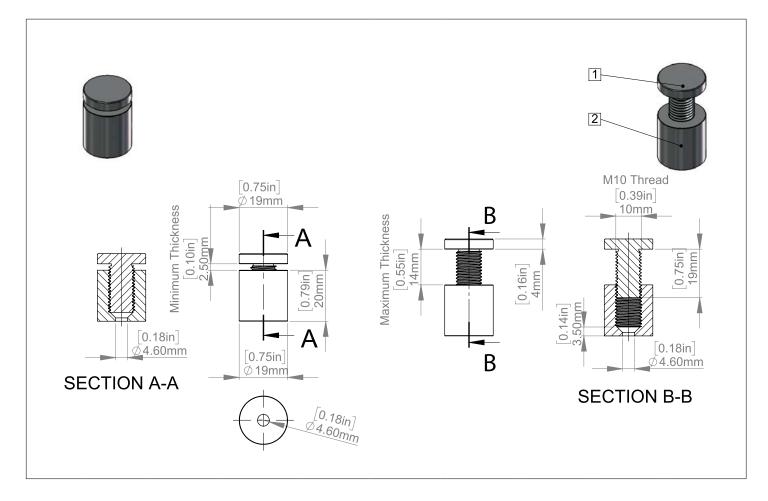

Acrylics	WAC1117-C		
Frame Width	13-1/2" ( 343mm )	Frame Height	19-1/2" ( 495.3mm )
Insert Width	11'' ( 279.4mm )	Insert Height	17" ( 431.8mm )
Top Thickness	3/16 (5mm)	Bottom Thickness	3/16 (5mm)
Pre-Drill Holes	4 x Ø 1/2" ( 12.7mm )	Finish	All edge polished Ultra-Fine

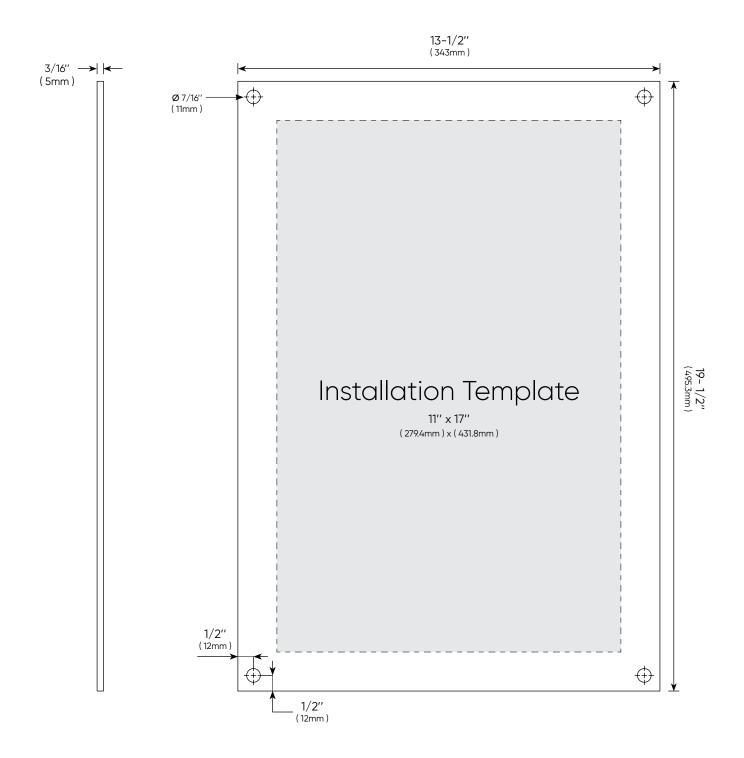

# **Installation Steps**

### Directions

Place template on wall with tape. Make sure that template is level. Mark the hole locations.




2 Drill a 1/4" hole in to the wall where marks were made.



Insert supplied anchors into the wall.



4 Mount the barrels to the wall.

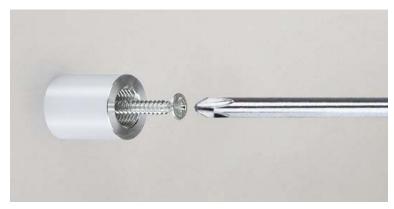

## **Installation Steps**

#### **Directions**

Remove plastic film from the back of the panels.
Center your image onto one of the panels and sandwich the second panel on top of the image making sure all of the edges and holes are aligned.



Place the sandwiched panels over the standoff barrels, insert the screw caps through the holes and into the barrels. Hand tighten the screw caps to secure both the panels and image in place.



This document and the product mentioned in reference are the exclusive property of MBS-Standoffs, they can not be used, reproduced, disclosed or disclosed without prior authorization!