

## **Acrylic Wall Frame Kits**


## Specifications and Instruction Guide

SKU	WAC2228-C-AS19-25SL	WAC2228-C-AS19-25BK	WAC2228-C-AS19-25GD	WAC2228-C-AS19-25BR
	WAC2228-C-SBLS19-25	WAC2228-C-SBLP19-25		


### Package Includes

- ► 2 x Acrylics
- ► 4 x Standoffs
- ► 4 x Screws and Anchors
- ▶ 1x Drill Template
- ▶ 1x Instruction Guide

Standoffs	AS19-25SL	AS19-25BK	AS19-25GD	AS19-25BR	SBLS19-25	SBLP19-25		
Diameters	3/4" ( 19mm	)	Distanc	e From Wall	3/4" ( 20mm )			
Material Thickness Accepted	Between (1/8	(1/8" and 9/16") <b>Thread</b>		Metric M10				
Aluminum	<ul> <li>Silver Anodized</li> <li>Black Anodized</li> <li>Champagne Anodized</li> <li>Gold Anodized</li> </ul>		Sto	ainless Steel	eel ► Satin Brushed ► Polished			
Washers	No			Washers	x 8			

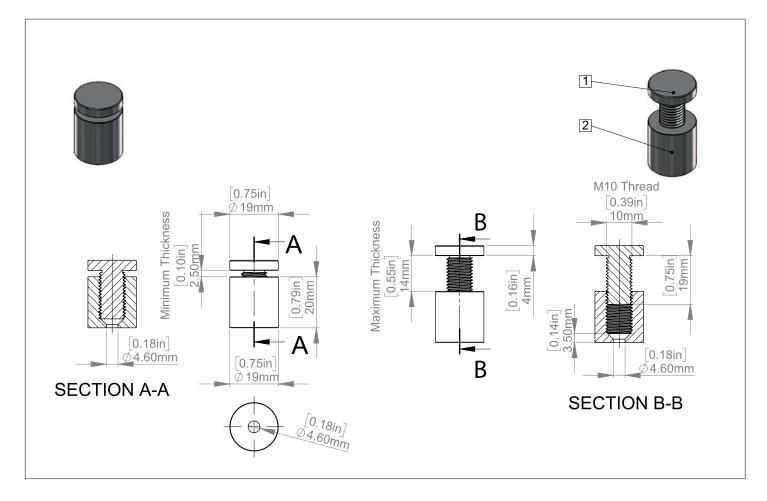

Acrylics	WAC2228-C		
Frame Width	23-3/4" ( 603.3mm )	Frame Height	29-3/4" (755.7mm)
Insert Width	22'' ( 558.8mm )	Insert Height	28" ( 711.2mm )
Top Thickness	3/16 ( 5mm )	Bottom Thickness	3/16 (5mm)
Pre-Drill Holes	4 x Ø 1/2" ( 12.7mm )	Finish	All edge polished Ultra-Fine

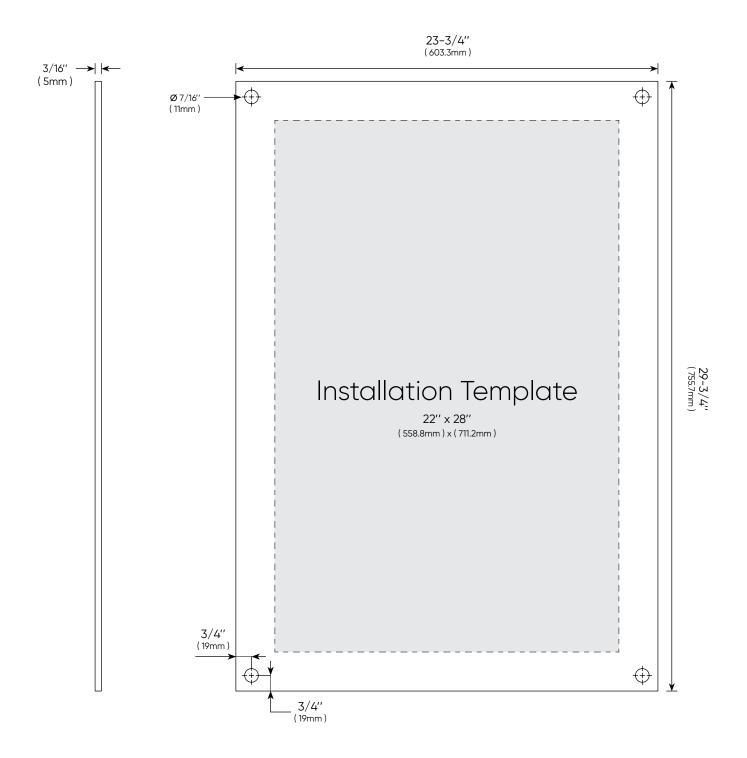

# **Installation Steps**

### Directions

Place template on wall with tape. Make sure that template is level. Mark the hole locations.



2 Drill a 1/4" hole in to the wall where marks were made.



Insert supplied anchors into the wall.



4 Mount the barrels to the wall.



## **Installation Steps**

#### **Directions**

Remove plastic film from the back of the panels.
Center your image onto one of the panels and sandwich the second panel on top of the image making sure all of the edges and holes are aligned.



Place the sandwiched panels over the standoff barrels, insert the screw caps through the holes and into the barrels. Hand tighten the screw caps to secure both the panels and image in place.



This document and the product mentioned in reference are the exclusive property of MBS-Standoffs, they can not be used, reproduced, disclosed or disclosed without prior authorization!